




Creating your new dream kitchen.

To start you will require the following: Tape Measure, Pen and Paper

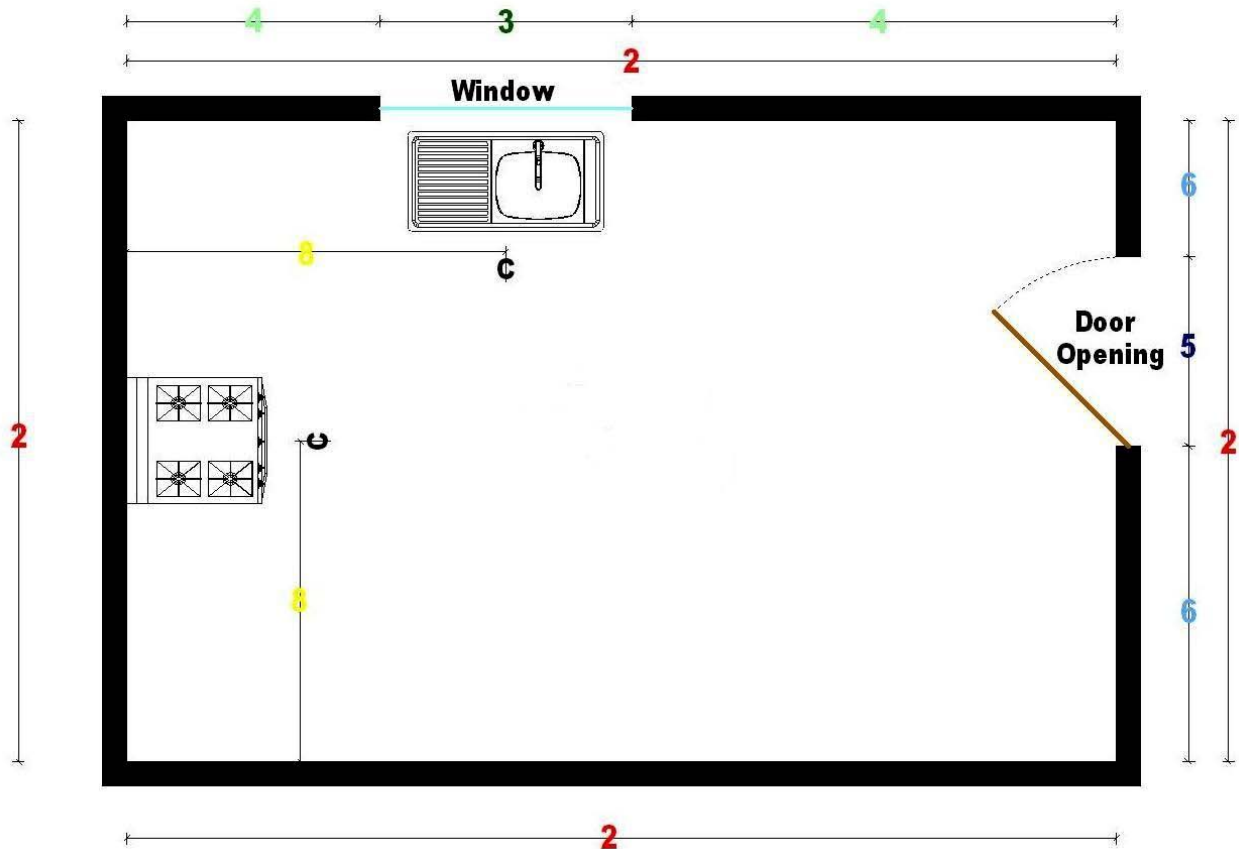

Step 1: Draw the outline shape of your kitchen including windows and doors.

Step 2: Measure the total length of each wall.

Step 3: Measure the width of each window and the height up from the floor.

Step 4: Measure the distance to the left of the window and to the right.

Step 5: Measure the width of each doorway.

Step 6: Measure the distance to the left of the doorway and to the right.

Step 7: Measure the height of the ceiling if you want your new cabinets to go all the way up.

Step 8: Measure the distance from the centre of your sink and oven/cook top to the wall on the left or right hand side.

Once you have completed your plan, call Kitform Kitchens on (08) 9791 9333 to make your free no obligation design and quote appointment where one of our friendly consultants will finalize the design using the latest 3D computer system.



Unit 2 Lot 5 Picton Rd
 Bunbury WA 6230
 Ph: (08) 9791 9333
 Fax: (08) 9791 9322
 Email: sales@kitform.com.au
 Web: www.kitform.com.au